



INIS SOLID BRASS SHELF

INSTALLATION INSTRUCTIONS

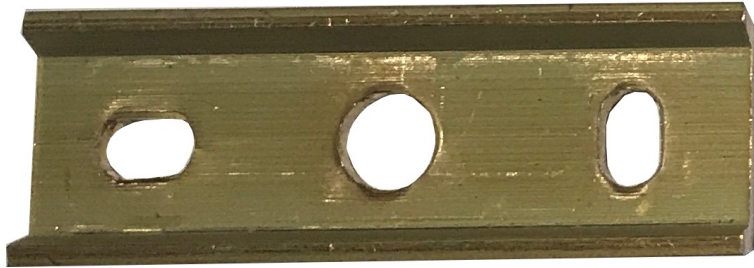

TIMBER FRAME WALL INSTALLATION

1. IT IS IMPERATIVE THAT WALL BRACKETS SHOWN ABOVE ARE SCREWED INTO THE TIMBER FRAME. FIXING THESE SHELVES INTO A WALL CAVITY WILL RESULT IN POSSIBLE DAMAGE TO WALL & SHELF AND MAY RESULT IN PERSONAL INJURY.
2. USE STUD FINDER TO LOCATE A NOGGING OR STUD.
3. USE SHELF AS YOUR TEMPLATE TO ASCERTAIN DISTANCE APART BRACKETS NEED BE FIXED AT.
4. USE A SPIRIT LEVEL TO ENSURE BRACKETS ARE LEVEL AND IN LINE.
5. DRILL SMALL PILOT HOLES (2-3mm drill bit) APPROXIMATELY 45mm INTO TIMBER THAT MATCH WITH THE TWO OUTSIDE HOLES ON EACH BRACKET.
6. FIX BRACKET TO WALL USING STAINLESS STEEL 8 GAUGE 50mm TIMBER SCREWS PROVIDED.
7. FIX SHELF TO BRACKETS WITH ALLEN KEY.

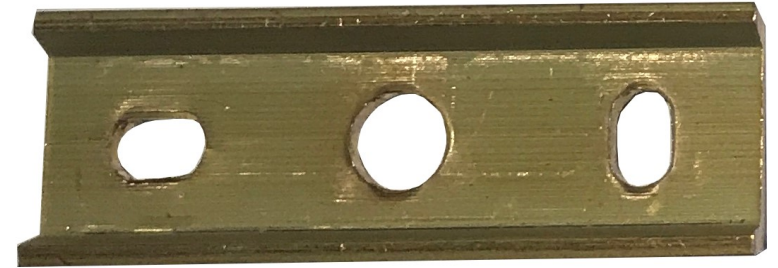

MASONRY WALL INSTALLATION

1. USE SHELF AS YOUR TEMPLATE TO ASCERTAIN DISTANCE APART BRACKETS NEED BE FIXED AT.
2. USE A SPIRIT LEVEL TO ENSURE BRACKETS ARE LEVEL AND IN LINE.
3. USE A 6mm RICOL OR EQUIVALENT MASONRY WALL PLUG. DRILL A 6mm HOLE APPROXIMATELY 40mm INTO MASONRY WALL THAT MATCH THE TWO OUTSIDE HOLES ON EACH BRACKET.
4. GENTLY TAP WALL PLUG INTO HOLE UNTIL IT IS FULLY INSERTED
5. FIX BRACKETS TO WALL USING STAINLESS STEEL 10 GAUGE 40mm SCREWS.
6. FIX SHELF TO BRACKETS WITH ALLEN KEY.

NOTE: SCREW PACK PROVIDED IS FOR INSTALL INTO TIMBER FRAME WALLS ONLY. FOR LESS COMMON MASONRY WALLS PURCHASE RECOMMENDED WALL PLUGS AND SCREWS AT YOUR LOCAL HARDWARE OR FASTENER OUTLET.

