

GENERIC INSTRUCTIONS FOR INSTALLATION OF MILLENNIUM BATH FILLERS & BATH FILLERS WITH HAND SHOWERS ON TIMBER FLOORS



KONTI/AKEMI/CIOSO/KIATO BATH FILLERS & BATH FILLERS WITH HAND SHOWER



Important Information


- Hot and cold water inlet pressures should be equal.
- Maximum static water pressure is 500kpa - AS/NZS3500.1-2003(clause 3.3.4). If water pressure exceeds 500kpa warranty is voided.
- Lines must be flushed out prior to installation of the mixer. Damage caused to the mixer by copper filings/foreign matter coming through the pipework is not covered under warranty.
- Maximum hot water temperature is 80C.

Cleaning Instructions

1. Under no circumstances should tapware be installed using acetone silicone
2. Never clean Mixers/Tapware/Showers/Accessories using harsh detergents/cleaning products, citrus based cleaning products or abrasive cleaning pastes.
3. Where your tapware remains dry in use, a soft 100% cotton cloth can be used to remove dust
4. Alternatively, wipe over with a soft 100% cotton cloth using tepid water with a small amount of liquid soap added (2% liquid soap maximum). Using a different cotton cloth thoroughly rinse off all soap mix using cold water. To finish wipe off all residual water with another dry cotton cloth



INSTALLATION

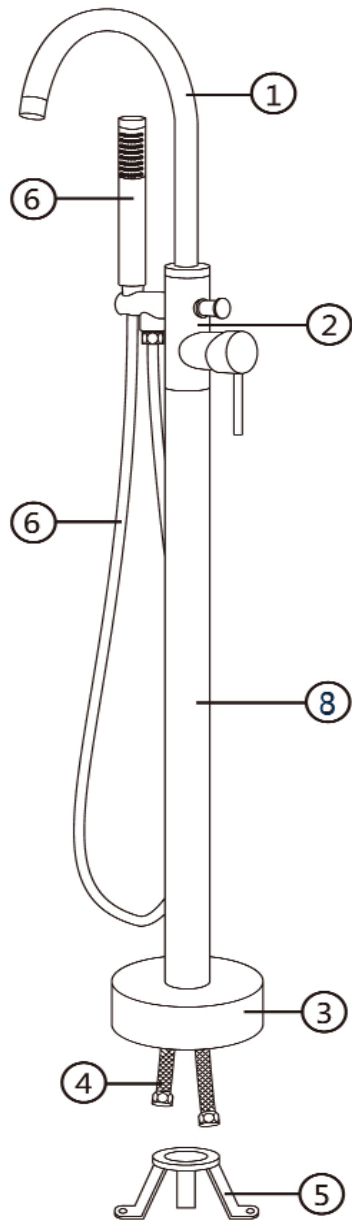

Parts List:


1. Bath Filler Spout
2. Bath Filler Body
3. Floor Escutcheon
4. Flexible Hoses
5. Mounting Base
6. Hand Shower Hose
7. Expansion Screws
8. Bath Filler Tube

INSTALLATION



Step 1


Thread Floor Escutcheon (3) on to Bath Filler Tube (8).

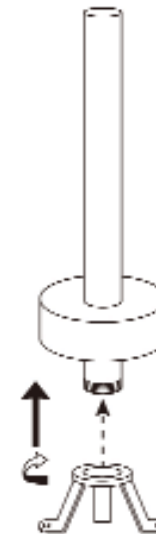

Step 2

Secure Mounting Base (5) to floor using Expansion Screws (7).


INSTALLATION

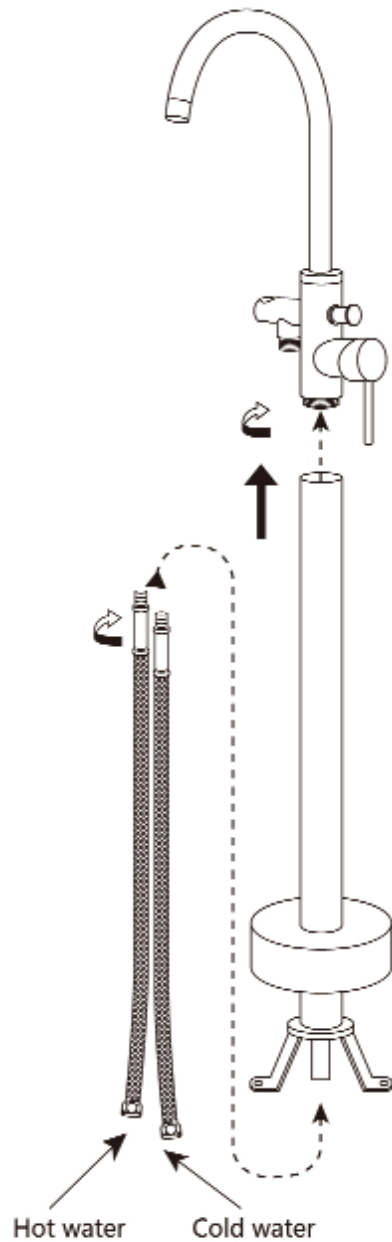


Step 3
Feed Flexible Hoses (4) through Bath Filler Tube (8) and thread securely on to faucet connections.

Step 4
Thread the Bath Filler Tube (8) on to the Bath Filler Body (2).

INSTALLATION

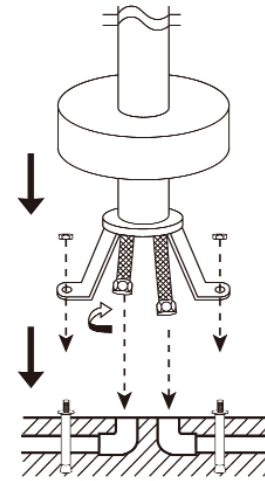

Step 5
Tighten the Mounting Base (5) to the floor. Connect the Flexible Hoses (4) to the hot and cold water supplies. Hot and cold water lines will rough in just above the finished floor. Exact height to be determined on site.

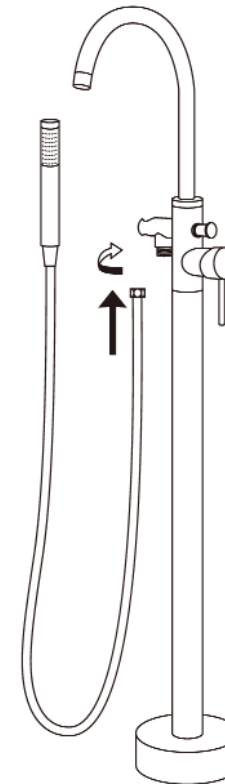

Step 6
Connect the Handshower Hose (6) to both the Handshower and Bath Filler Body (2). Turn on water to test connections.



Millennium Tapware by Peter W Eldering Pty.Ltd.

7 Harley Crescent, Condell Park, NSW 2200

info@millenniumtapware.com.au

www.millenniumtapware.com.au